

USER MANUAL Smart Bidet Toilet Seat

Contents

- Thank you for purchasing our Smart Bidet Toilet Seat.
 Please read the manual carefully and use product correctly
- Installation should be completed by a licensed plumber



TE001



TE002



TE003



TE005




Safety notes	1
Product description	2
Product dimension	2
Component description	5

Installation steps	6	
Function Introduction	8	


Cleaning and maintenance	9
Product technical specification	10
Faults and solutions	10
Warranty Card	11

Before use

Safety notes

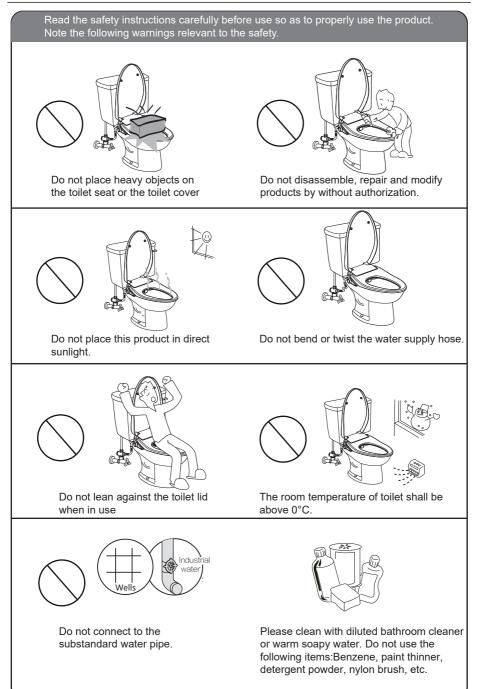


Product description

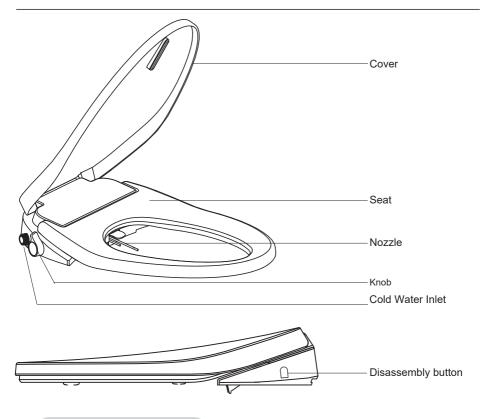


• Product dimension drawing

TE001

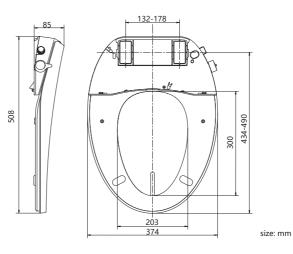


2


TE002

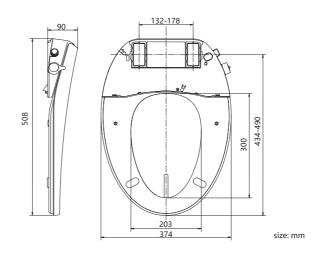

TE003

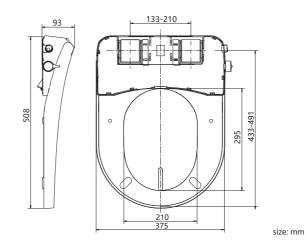


TE005

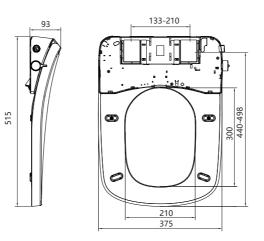

size: mm

TE101

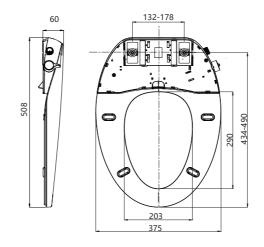

size: mm


1.Cover plate 2. Installation template 3.Fixing Parts Adjustment Sheet (2) Screws (2) Adjustment Plate (2) **Fixing Plate** Rubber Expansion Bolts (2) 4.Adapter 5. Water inlet hose 6. User manual User Manual

Filter screen

.

5

Installation steps

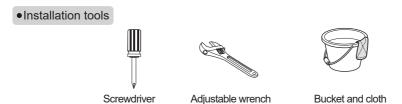


- Attention before installation
 - 1.Water pressure range: 0.07-0.75MPa, please follow the instructions.
 - 2.Water Supply Valve shall be located close to the location where this product is installed and disassembled.
 - 3.Please use the Water inlet hose that comes with the product to prevent water leakage.
 - 4. When installing Water inlet hose, be careful to prevent the black gasket falling out.


• Installation Procedure

1.Loosen the nut connecting and remove the old cover.




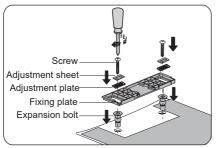

5.Slightly push the cover into fixing plate until you hear a "CLICK", indicating that the cover has been installed in place.

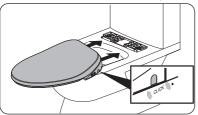


2.Place the installation template on the ceramic as shown. Align it with the rim of toilet.

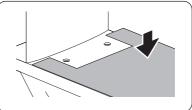


- 3.①Insert the rubber expansion bolt into ceramic hole
 ②Place fixing plate in notch part of template
 ③Place adjusting sheet and plate in fixing plate
 - 4 Align screws with rubber expansion bolt and tighten

6.Close the water supply valve.

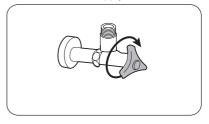

7.Install Water inlet hose




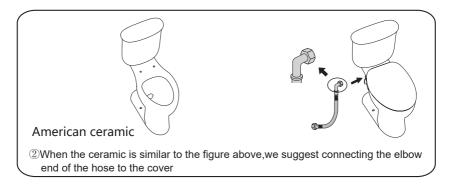

inlet valve flexihose adaptor water supply valve Normally, the adaptor is installed on the water supply valve inlet valve water supply valve If the water supply valve and wall is too close, you can installed the tee under the inlet valve

8.Connecting flexible hose ;

- 9.Open the water supply valve to check water leakage.
- 10.Turn on the knob to check whether the nozzle is protruding;

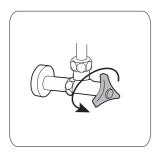





- 1. It is strictly prohibited to move the product from the toilet cover, otherwise easy to cause mechanical failure.
- Prohibition 2. It is strictly prohibited to connect hot water above 40 C and cold water that may lead to icing.

Function Introduction

- Knob function
- 1. Rinse function

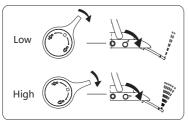

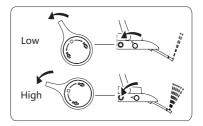


Bidet/Hip rinsing

Rotate knob to adjust amount of water


Note: Please open the knob to the maximum before use,and then adjust the amount of water and rinsing force through the konb.

• Manual cleaning of spray tube

- Gently pull out the nozzle and dip the neutral detergent with a soft cloth, sponge or small brush.
- Gently support the nozzle, wipe the spray tube and nozzle.

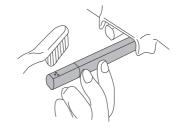

Clean filter screen

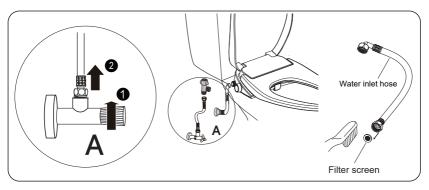



- Make sure that the , as '{A`]] | valve ã Ácloseå off before you clean the filter screenÈ
- Clean the filter screen when the water flow is less than normal hours.
- During cleaning process, the product must be thoroughly separated from the water inlet hose;
- Reinstall the filter screen in reverse order after cleaning.

• Product surface cleaning

- Wipe the product surface with a sponge or soft cloth dampened with room temperature water or a neutral detergent.
- Lift the upper cover and the seat ring when cleaning other parts with cleaning agents.
- Do not put cover on before the cleaning agent in the ceramic toilet is completely washed, otherwise the surface may be corroded by the evaporation of cleaning agent.

ltems			Descript	ion	
Model		TÒ001-110			
		TÒ002-110			
		TÒ003-110			
		TÒ005-110			
		TB101-110			
Water supp	Water supply pressure		0.07-0.75MPa		
Water supply temperature		Water at room temperature			
Ambient temperature		0~40°C			
Notwoight					₩₩₩/Ò101
	Net weight		About 2.5kg	About 3.0kg	About 2.0kg
Cleaning	Water amount regulation	Stepless regulation			
device Protective device		Anti-siphon valve + anti-backflow valve			
Antibacterial material		Nozzle			
Others	Control operation	Knob			

Faults and solutions

Q•`^•	₩Possible cause	A Dolution	
	Knob is not completely turned on	Increase knob regulating angle	
Low flushing	Water pressure too low	Contact relevant departments to solve water pressure problems	
	Valçe off	Open the valçe	
Turn on knob and no the water comes out	The filter of the water inlet pipe is blocked	Clean the filter of the water inlet pipe	
	Nozzle clogging	Remove the nozzle and c/^æ	
Sp¦ay rod cannot reset	Water quality is] [[¦ toÁà [&\ ðj.* the spræy rod	Clean spræy rod	
Base leaking	Water pressure too high	Contact relevant departments to solve water pressure problems	

Warranty Card

To Ôustomers:

Information:

	Custome	r nam	е		
Customer information Address					
	TEL				
Dealer	Name				
information	TEL				
Model				Product series number	
Purchase date	Y	М	D	Warranty period	One-year f¦[{ Ás@Aj,`¦&@æe^Aåaæ∧

Notes to warranty card:

- 1. Please complete the warranty card.
- 2. Warranty cards and invoices are important for the warranty service. If the product failure occurs during warranty period, please show the warranty card and the invoice when the dealer or after-sales service personnel of the Company provide on-site maintenance and repair.
- 3. The warranty card cannot be reissued, please keep it properly.

During the warranty period, the Company will provide repair free of charge according to the use instructions, precautions for normal use.

KUlffUbhmi91Wig]cbg

- 1. Out of warranty Á ^¦ã å.
- 2. The valid invoice and warranty card cannot be provided during the warranty period.
- 3. Failure or damage caused by transportation, collision after purchase.
- 4. Product damage during abnormal use, failure and damage during the warranty period caused by human factors or natural disasters, such as fire, earthquake, flood, lightning or environmental pollution, etc.
- 5. Failure or damage caused by unauthorized disassembly, modification or maintenance due to user's cause or responsibility.
- 6. Failure or damage caused by violation of maintenance regulations in use, such as improper use of cleaning agent or wiping and maintenance methods not compliant with maintenance requirements.
- 7. The consumable items (such as sealing rings, etc.) or products have failed or damaged due to sand and impurities.
- 8. Conduct the secondary transfer according to the customer's requirements.
- 9. Product not installed by licensed plumber